

## 2031-UNIVERSAL SKIP



The 2031 is ideal for general use for industry or construction.

Fork pockets and crane lift points (fully tested and certified) make this unit ease to move around site.

The unit can also be supplied complete with heavy duty castors as an addition if required.

The 2031 also benefits from being stackable increasing efficient use of your space when not in use.

Product Code	SWL (kg)	Capacity (ltrs)	Height (mm)	Width (mm)	Length (mm)	Weight (kg)
2031.4	1000	300	560	1210	1040	110
2031.8	1000	500	700	1210	1040	140
2031.10	1500	750	1000	1210	1040	170
2031.12	2000	1000	1240	1210	1040	200

Appearance may vary from picture above.

### NOTES

The following instructions must be read and understood by each intended user of this equipment; if there is anything you do not understand contact Eichinger Equipment Ltd.

Ensure the equipment is adequate for the job you need to carry out.

You must not operate this equipment if you are under the influence of alcohol, drugs or if you are feeling unwell.

A risk assessment should be carried out prior to moving or using this equipment.

The following PPE (Personal protective equipment) should be worn when using this equipment:

Gloves / Goggles / Hard Hat / Steel Toecap boots / Hi-Vis Vest

We also suggest suitable clothing should be worn.

**Familiarise yourself with the equipment, its use and how it works!**

As this equipment is used at multi-level, ensure the intended area for use is clear of overhead cables and power lines or similar hazards which may affect its safe use. This equipment must always be used in conjunction with your site safety policies.

The work area must be clear of obstructions with adequate space for the operative to work safely around the equipment.

Check and ensure the equipment is inspected and in a safe condition prior to its use. Also ensure that its load is stable and secure.

## SETUP & OPERATION

The 2031 Universal Skip is designed for use with either a 4 leg chain for crane lifting or fork pockets for use with a telehandler or forklift.

Ensure the skip is landed on a flat and even surface prior to filling. When filling ensure that the load does not exceed the stated swl, is evenly spread throughout the skip and is kept below the height of the sides of the skip.

If transporting by crane attach a suitably rated 4 leg chain to the lifting eyes on the skip ensuring the hooks are securely closed prior to lifting. Once happy that the hooks are secure, raise the skip just off of the ground and check the skip is balanced. You may now transport the skip to it's required destination ensuring you adhere to your lift plan / method statement.

This skip should not be used when a load has to be discharged, goods must be manhandled from the skip.

Visit [www.eichinger.co.uk](http://www.eichinger.co.uk) for more suitable skips to fit this requirement.

The skip can now be transported away from the discharge zone.

If using the optional castors operatives must ensure that all castors are locked prior to loading, lifting, landing and unloading.

## CLEANING & STORAGE

Having completed the work required lower the skip to the intended storage location, ensuring the area is clear. Lower the bale arm to the rear of the skip fully. Disengage the lifting hook from the skip and ensure that the skip is clean and ready for its next intended use.

